


—
INSTALLATION INSTRUCTION


Auxiliary contact

OA2L11

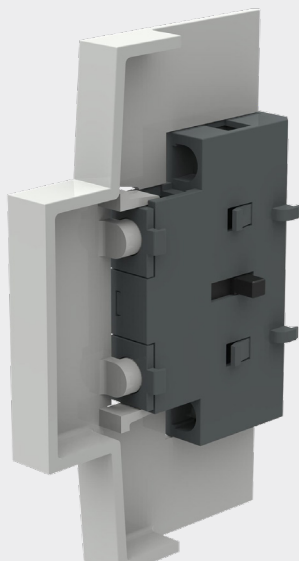

Auxiliary contact

OA2L11

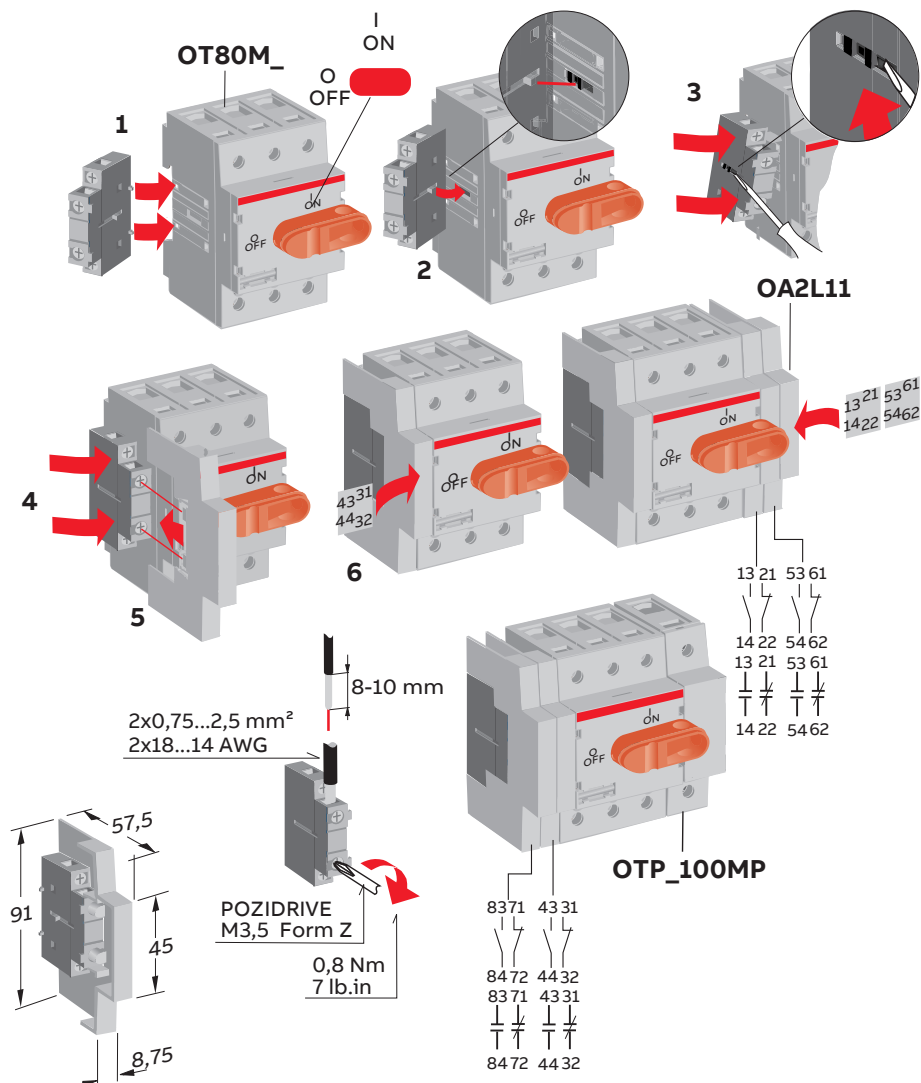



Contact us

ABB Oy

P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage