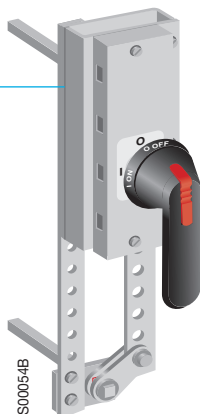
 


OETLZW_ Installation instruction

1



OETLZW 11

OETL 400
OESA 200...800
OT 315...800
OS 315..400




OETLZW 21

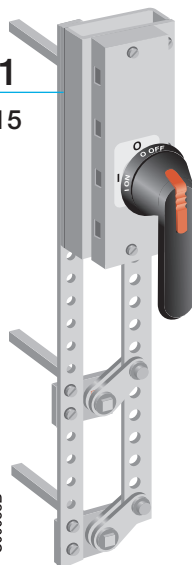 OETL 200...315





OETLZW 20

 OETL 200...315





OETLZW 12

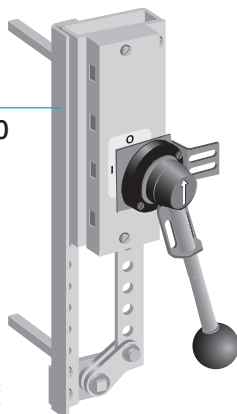 OETL 630...1600
OESA 600...800
OT 315...800
OS 600..800



OETLZW 13

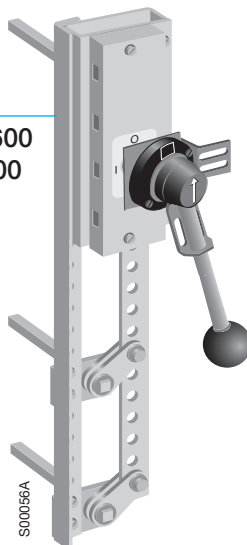 OETL 400...1600
OESA 200...800
OT 315...800
OS 315..800




H = h 2mm

A


OETL 200...315

A
1 ± 0,2

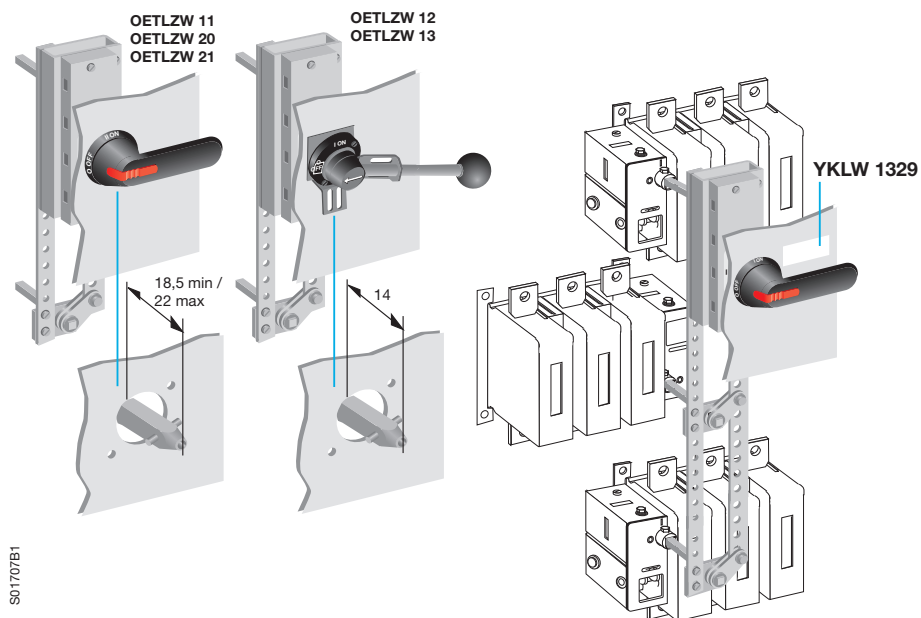
4



5

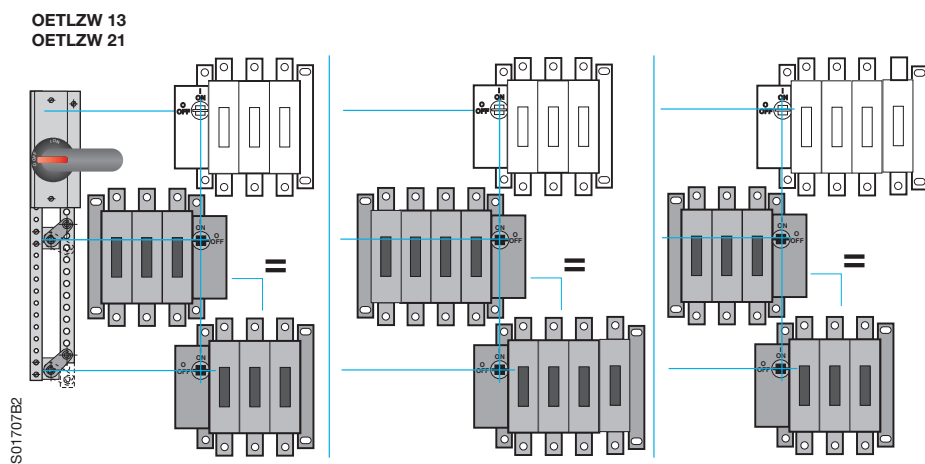


OETLZW 11, 20, 21

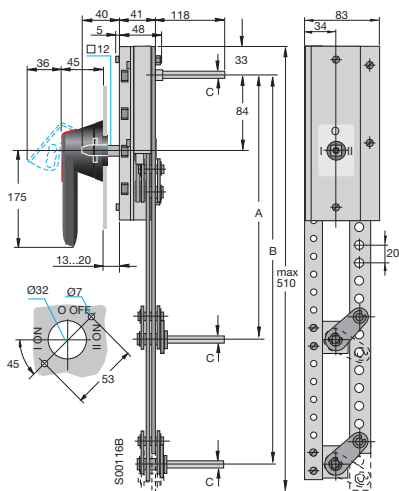



	A	B	C
OETLZW 11	210+(0...11)x20 mm		12
OETLZW 20	210+(0...18)x20 mm		8
OETLZW 21	210+(0...9)x20 mm	210+(0...9)x20 mm	8

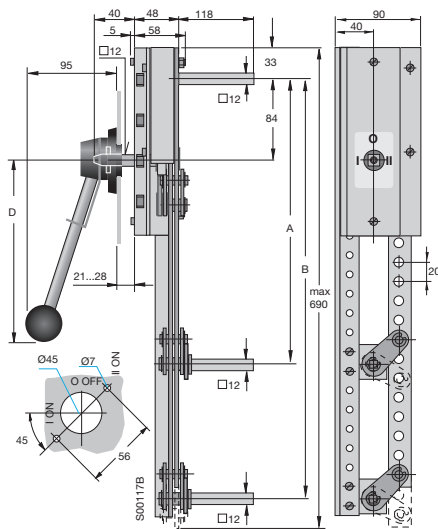OETLZW 12,13



	A	B	D
OETLZW 12	210+(0...18)x20 mm		220 mm
OETLZW 13	210+(0...18)x20 mm	250+(0...18)x20 mm	320 mm

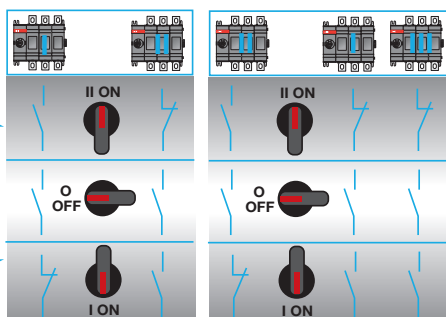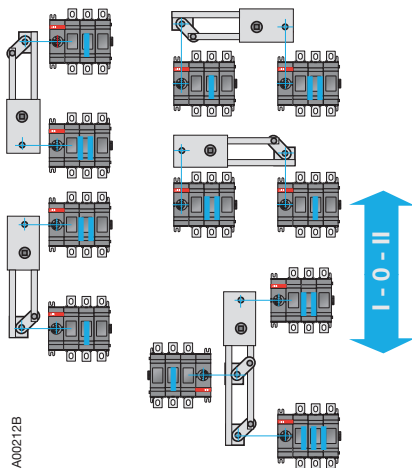7



For more information please contact:

ABB Oy, Protection and Connection
P.O. Box 622, FI-65101 Vaasa, Finland
www.abb.com/lowvoltage

Power and productivity
for a better world™

