
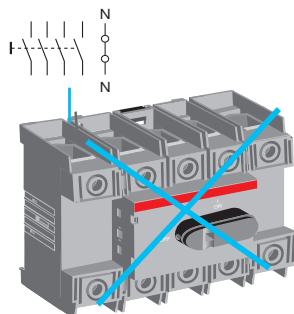
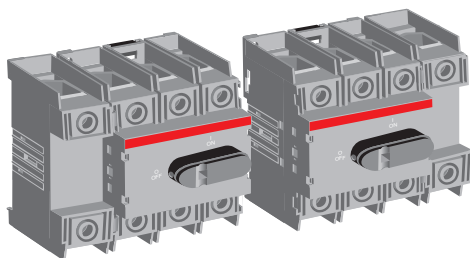
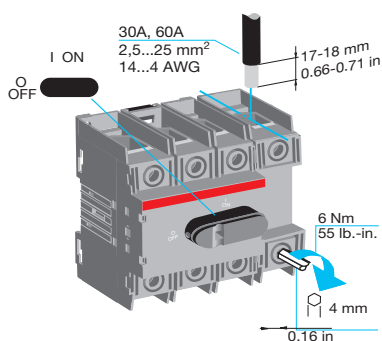
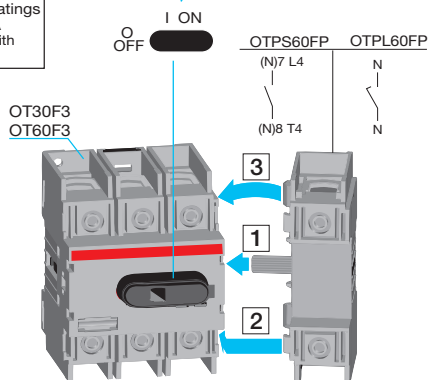
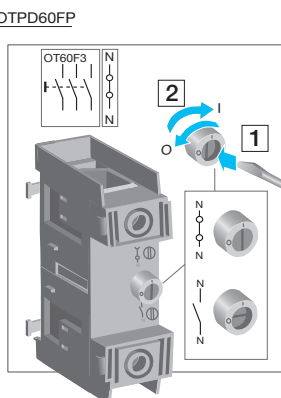
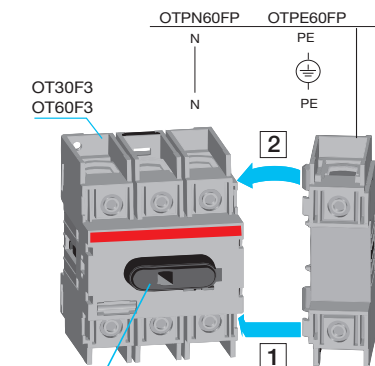


OTP_60FP, OTP_60FT1


Installation instruction

OTP_60FP

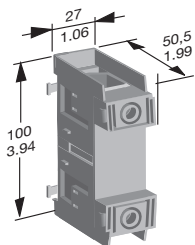

AD687

OTP_60FT1

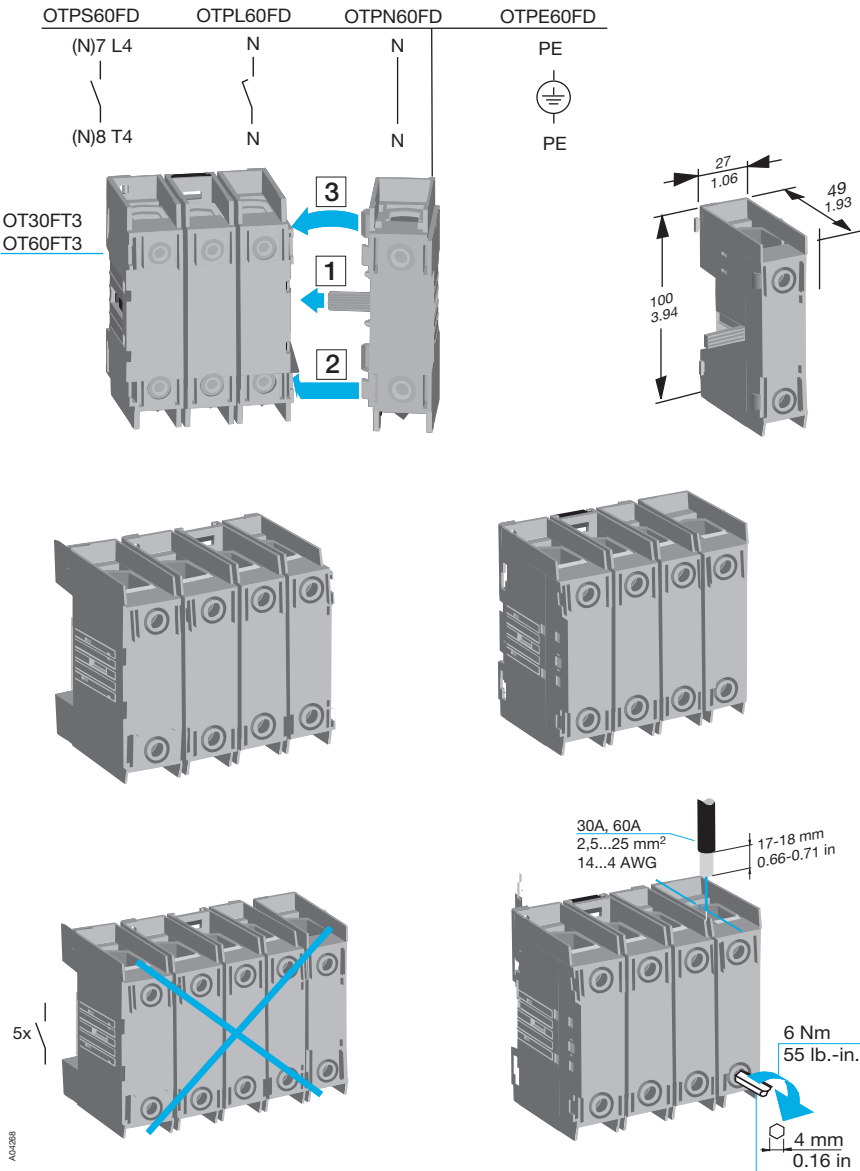

For more information please contact:

ABB Oy, Protection and Connection
P.O. Box 622, FI-65101 Vaasa, Finland
new.abb.com/low-voltage

Power and productivity
for a better world™ **ABB**