

Esquemas de montaje para tapas y marcos

Cover plate and frame assembly diagrams

Interruptores y pulsadores

Switches and push-buttons



Mecanismo
Insert


Marco
Frame

Marco intermedio
Intermediate frame

Tecle
Rocker

Bases de enchufe

Socket outlets

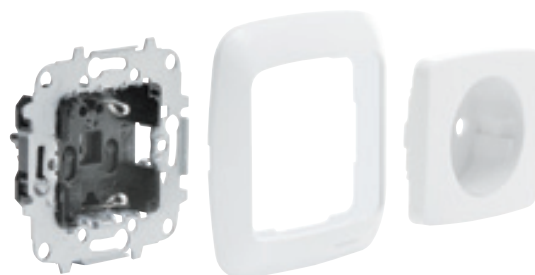

Mecanismo
Insert


Marco
Frame

Tapa
Cover

Tornillo
Screw

Interruptores de tarjeta

Card switches

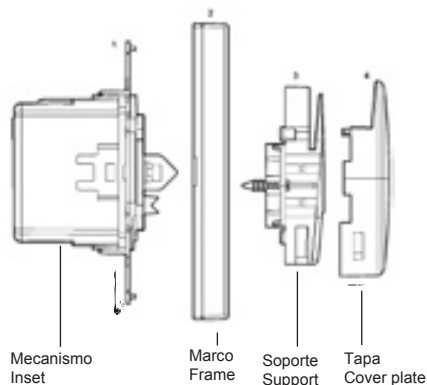

Mecanismo
Inset


Marco
Frame

Soporte
Support

Tapa
Cover plate

Reguladores de pulsación e interruptores temporizados

Push dimmers and time delay switches

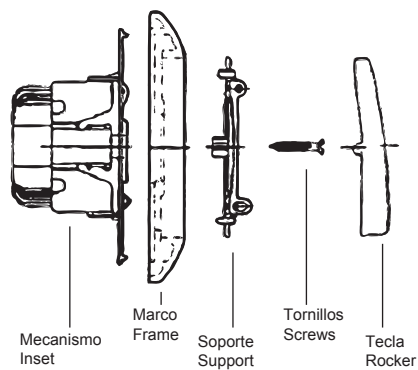

Mecanismo
Inset

Marco
Frame


Soporte
Support

Tornillos
Screws

Tecle
Rocker

Tomas de TV, R y/o SAT

TV, R and/or SAT outlets

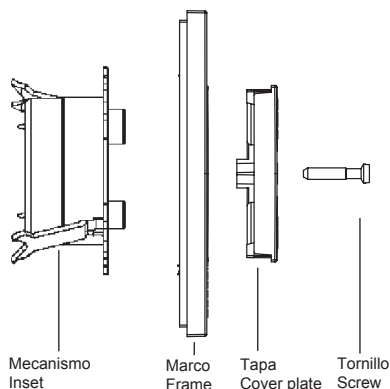

Mecanismo
Inset


Marco
Frame

Tapa
Cover plate

Tornillo
Screw

Otras funciones

Other functions

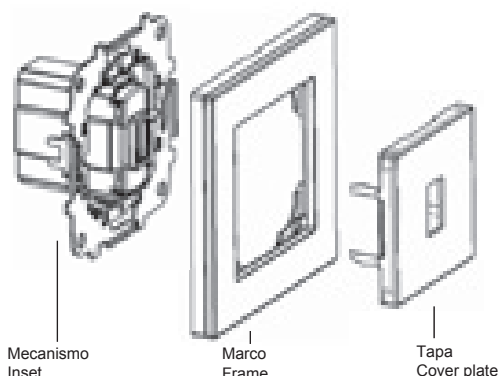

Mecanismo
Inset

Marco
Frame

Tapa
Cover plate