

SafeCAD System Requirements - Overview

Operating System	SafeCAD	SafeCAD 2	SafeCAD 2008	SafeCAD 2012	SafeCAD 6
Windows 10	✗	✗	✗	✗	✓
Windows 7	✗	✗	✗	✓	✓
Windows XP	✓	✓	✓	✗	✗
Windows Vista	✗	✗	✗	✗	✗
Windows NT 2000	✓	✗	✗	✗	✗
Windows NT4	✓	✗	✗	✗	✗
AutoCAD version (full version, not LT)					
AutoCAD 2018	✗	✗	✗	✗	✓
AutoCAD 2017	✗	✗	✗	✗	✓
AutoCAD 2016	✗	✗	✗	✗	✓
AutoCAD 2015	✗	✗	✗	✗	✓
AutoCAD 2014	✗	✗	✗	✗	✓
AutoCAD 2013	✗	✗	✗	✗	✓
AutoCAD 2012	✗	✗	✗	✓	
AutoCAD 2011	✗	✗	✗	✗	
AutoCAD 2010	✗	✗	✗	✗	
AutoCAD 2009	✗	✗	✗	✗	
AutoCAD 2008	✗	✗	✓	✗	
AutoCAD 2007	✗	✗	✓	✗	
AutoCAD 2006	✗	✓	✓	✗	
AutoCAD 2005	✗	✓	✗	✗	
AutoCAD 2004	✗	✓	✗	✗	
AutoCAD 2002	✓	✓	✗	✗	
AutoCAD 2000	✓	✓	✗	✗	