Remote monitoring options for ABB drives, converters and inverters

Installation guide NEXA-21

Installing NEXA-21 to NETA-21

- 1. Press NEXA-21 against NETA-21.
- 2. Tighten the grounding screw. Do not use excessive force.





