

- This Version Matrix document helps you to find out what kind of software is available for this field device and which software version you have to use with which kind of Hardware and Firmware Revision.

- You will find the latest software, documentations or this Version Matrix (recommended) available on:  
<http://www.abb.com/Fieldbus>  
 -> select "[Fieldbus protocol] field devices" -> go to [device type name] -> select "latest info"  
 Tab "Fieldbus & HART Files" opens

### FV4000, TRIO-WIRL V, FS4000, TRIO-WIRL S

HART		Revision
	<b>Hardware</b>	<b>all released</b>
	<b>Software</b>	<b>≤ B.10</b>
<b>Title (ID-001A)</b> [Doc.-No.]	<b>Device</b>	<b>00</b>
<b>DTM (FDT 1.2) part of DTM400</b> [3KXD800400S0030]		01.01.01
<b>EDD (General)</b> [3KDE193100S0003] When integrated in tools, this separate driver not needed!		00 11 (Dev. / EDD)
<b>EDD Integrated in AMS ≥ 6.0</b> No separate driver needed.		00 07 (Dev. / EDD)
<b>EDD for HHC275</b> [3KDE193100S0003]		00 08 (Dev. / EDD)
<b>EDD for HHC375</b> [3KDE193100S0003] When integrated in tools, this separate driver not needed!		00 11 (Dev. / EDD)
<b>Supplem. Info.-Driver (DTM)</b> [3KDE193101R39xx]		✓

### FV4000, TRIO-WIRL V, FS4000, TRIO-WIRL S

PROFIBUS PA		Revision
	<b>Hardware</b>	<b>all released</b>
	<b>Firmware</b>	<b>≤ A.20</b>
<b>Title (ID-05DC)</b> [Doc.-No.]		
<b>GSD</b> [3KDE193100S0004]		03
<b>DTM (FDT 1.2) part of DTM400</b> [3KXD800400S0030]		01.04.05
<b>EDD for PDM V5.2</b> [3KDE193100S0006]		01.00.02
<b>EDD integrated in PDM ≥ V6.0.</b> No separate driver needed		02
<b>Supplem. Info.-Driver(DTM)</b> [3KDE193104R39xx]		✓

### FV4000, TRIO-WIRL V, FS4000, TRIO-WIRL S

FOUNDATION Fieldbus-H1		Revision	
<b>Title (ID-0015)</b> [Doc.-No.]	<b>Device</b>	<b>≤ 01</b>	<b>02</b>
<b>EDD/CF (General-registered)</b> [3KDE193100S0007] When integrated in tools, this separate driver not needed!		010302 (contains 010202.cff 0103.ffe 0103.sym)	020101
<b>EDD/CF (ABB-optimized)</b> [3KDE193100S0007]		010302	not required