NOTES:

1. WARNING: This drawing does not illustrate the installation methods required for hazardous locations. Prior to any installation in a Classified Hazardous Location, verify installation methods by the Control Drawing referenced on the product's name tag and national and local codes.

- 2. To access the XMV termination board, remove the enclosure rear cover.
- 3. Maximum accumulated length for the RS-485 buss is 4000 feet.

