

ABB MEASUREMENT & ANALYTICS | INSTRUCTION | IN/ANAINST/019-EN REV. B

Endura AZ40 Transmitter



SD media card spares kit Kit reference: AZ400 768

Measurement made easy

Endura AZ40 transmitter

Introduction 1

This publication details replacement procedures for the SD media card assembly (AZ400 768) fitted to Endura AZ40 transmitters.

Before carrying out any procedures, read Section 3. These procedures must be carried out by a suitablytrained technician.

Kit contains:

- Transmitter SD media board
- This publication

Tools required

- Transmitter door key (supplied with transmitter)
- Operating instruction <u>OI/AZ40-EN</u>*
- Anti-static strap
- T8 x 40 Torx screwdriver

*Operating instruction OI/AZ40-EN contains mandatory safety information and can be downloaded from the link (above) or by scanning this code:



For more information 2

Further information is available from: www.abb.com/analytical

or by scanning these codes:





Sales

Service

3 Health & Safety

3.1 Safety precautions

Be sure to read, understand and follow the instructions contained within this document before and during use of the equipment. Failure to do so could result in bodily harm or damage to the equipment.



WARNING - Bodily injury Installation, operation,

- maintenance and servicing must be performed:
- by suitably trained personnel only
- in accordance with the information provided in this document
- in accordance with relevant local regulations

3.2 Potential safety hazards

3.2.1 Process conditions and requirements

WARNING – Bodily injury **Environmental conditions**

- High air / equipment / structure temperatures, poor air quality and adverse environmental conditions may be present when the process is running.
- It is recommended that the process is shut down before performing these procedures.
- The process must be cool enough to enable shutdown, disconnection and removal of the sensor in a safe manner and in accordance with relevant local regulations.
- Appropriate PPE, including mask and goggles must be worn when preparing the process for these procedures.

WARNING - Serious damage to health Fibrous material



The sensor and probe assemblies (standard and high temperature versions) contain fibrous material that can be a health hazard if airborne.

- The material, predominantly aluminosilicate refractory fibres, CAS 142844-00-6. Refractory ceramic fibres (RCF) are classified as:
 - Category 1B carcinogen under regulation (EC) No 1272/2008 - the classification, labelling and packaging regulations.
 - Category 2B carcinogen by inhalation by The International Agency for Research on Cancer (IARC).
- When removing the sensor cover and subsequent maintenance activities, exposure to the airborne fibres could occur. ABB have conducted air sampling assessments within the breathing zone of the operator and have identified that an exposure limit of 1 fibre / cubic centimetre is unlikely to occur.
- Exposure to any carcinogen must be kept as low as reasonably practicable.
- Appropriate PPE defined below, must be worn when working with probe assemblies (all installation, replacement, maintenance procedures):
 - A face fit tested, half mask conforming to EN140 (or equivalent) with a level 3 particulate filter conforming to EN 143 (or equivalent).
 - Disposable protective coveralls in accordance with Type 5 ISO 13982-1:2004 (or equivalent).
 - Goggles and gloves.

3.2.3 Endura AZ40 sensor / probe - installation to pressurized process

DANGER - Serious damage to health / risk to life Pressurized equipment - do not install / remove / the sensor / probe if the process is at positive pressure

Installation, operation, maintenance and servicing of pressurized equipment must be performed:

- by suitably trained personnel only
- in accordance with the information provided in this document
- in accordance with relevant local regulations
- when process conditions are suitable to allow enough to enable installation / maintenance



WARNING – Bodily injury

High temperature on exposed surfaces – see Fig. 3.1

- During operation, exposed sensor surfaces can reach 200 °C (392 °F).
- Ensure suitable PPE is available and is worn before handling the sensor.
- Do not touch exposed surfaces until the sensor / probe is cool enough to handle with PPE.

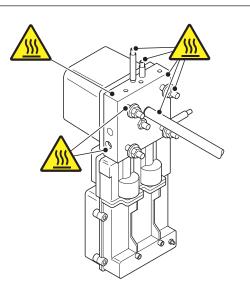


Fig. 3.1 High temperature points on exposed sensor surfaces during operation

3.2.5 Endura AZ40 sensor - weight

WARNING – Bodily injury

- The sensor weighs 9.0 kg (20 lb). When fitted with a probe / filter assembly, the combined sensor / probe weight is dependent on probe length / type plus filter option – refer to Operating instruction OI/AZ40-EN for weight details.
- The sensor / probe assembly must be mounted in accordance with the information supplied in Operating instruction OI/AZ40-EN.
- Suitable lifting equipment must be available when installing / removing the sensor / probe from the process.

3.2.6 Endura AZ40 analyzer - electrical



WARNING – Bodily injury

To ensure safe use when operating this equipment, the following points must be observed:

- up to 240 V AC may be present. Ensure the supply is isolated before removing the terminal cover
- normal safety precautions must be taken to avoid the possibility of an accident occurring when operating in conditions of high pressure and / or temperature

Safety advice concerning the use of the equipment described in this document or any relevant Material Safety Data Sheets (where applicable) can be obtained from the Company, together with servicing and spares information.

Endura AZ40 transmitter - weight

WARNING – Bodily injury

- The transmitter weighs 7.6 kg (17 lb) and must be mounted in accordance with the information supplied in Operating instruction OI/AZ40-EN.
- Suitable lifting equipment must be available when installing / removing the transmitter from the mounting.

4 Isolating the transmitter

4.1 Isolating the transmitter

Referring to Fig. 4.1.

1. Isolate transmitter (A) from incoming mains powers supplies (B).



DANGER – Serious damage to health / risk to life The transmitter must be isolated from mains powers supplies before carrying out this procedure.

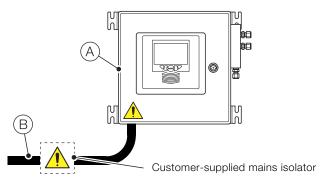


Fig. 4.1 Isolating the transmitter from incoming mains power supplies

5 Replacement procedure

Referring to Fig. 5.1:

- 1. Unlock transmitter door (A) using the transmitter door key and open the transmitter door.
- Remove 6 Torx screws (B) securing the display cover and 2. remove processor / display board cover (C).
- Remove media board (D) by pulling it away from the main З. board.
- 4. Fit the replacement media board and refit processor / display board cover \bigcirc in the reverse order of removal.
- Close transmitter door (A), lock using the transmitter door 5. key.
- 6. Prepare the transmitter for operation by reversing the isolation procedure - see Section 4, page 3.

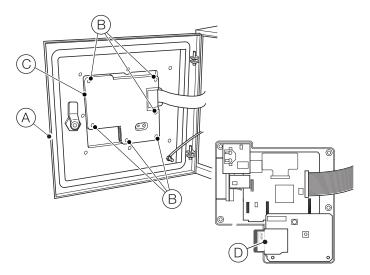


Fig. 5.1 SD media card assembly replacement procedure

ABB Limited Measurement & Analytics Howard Road, St. Neots Cambridgeshire, PE19 8EU, UK Tel: +44 (0)870 600 6122 Fax: +44 (0)1480 213 339 Email: instrumentation@gb.abb.com abb.com/measurement

ABB Inc. Measurement & Analytics 125 E. County Line Road Warminster, PA 18974 USA Tel: +1 215 674 6000 Fax: +1 215 674 7183

We reserve the right to make technical

changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents - in whole or in parts - is forbidden without prior written consent of ABB. © ABB 2018

3KXA722446R2001