

ABB MEASUREMENT & ANALYTICS | DATA SHEET | DS/RVG200-EN REV M

ScreenMaster RVG200 Paperless recorder



Measurement made easy Process data at your fingertips

High security data recording

protected data storage compliant to 21 CFR Part 11

Simple, intuitive operation

- touchscreen operation and configuration
- USB ports for keyboard and barcode scanner

Easy remote access

 standard Ethernet communications provide timesaving remote access and operation via a standard web browser

Complete data recording solution

 automatic data collection via Ethernet combined with powerful data analysis using DataManager Pro software

Built to survive

• IP66 and NEMA 4X environmental protection

Scalable high specification I/O

- high accuracy and stability compliant to AMS 2750 E
- recording of up to 24 channels

Problem solving advanced functionality

• math, logic, flow totalization, energy calculations and batch recording


Overview

The ScreenMaster RVG200 is a secure, easy-to-use paperless recorder. Up to 24 process signals can be connected directly to the RVG200's analog inputs or transferred to it via digital communications. All process data, including alarm conditions, math calculation results and totalizer values, are displayed clearly to the operator and archived securely in an encrypted format for review using the accompanying DataManager Pro PC software.


A touch screen featuring swipe gesture control provides fast and intuitive operation. USB ports further simplify operation by enabling peripherals (for example, a keyboard, mouse or barcode scanner) to be attached.

The RVG200's standard Ethernet communications and inbuilt web server enable:

- · easy integration to an existing network
- · automatic data collection
- remote process supervision

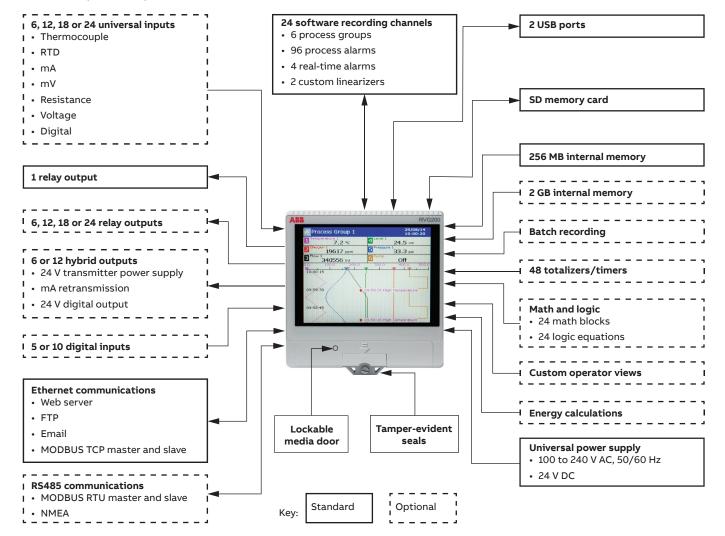


... Overview

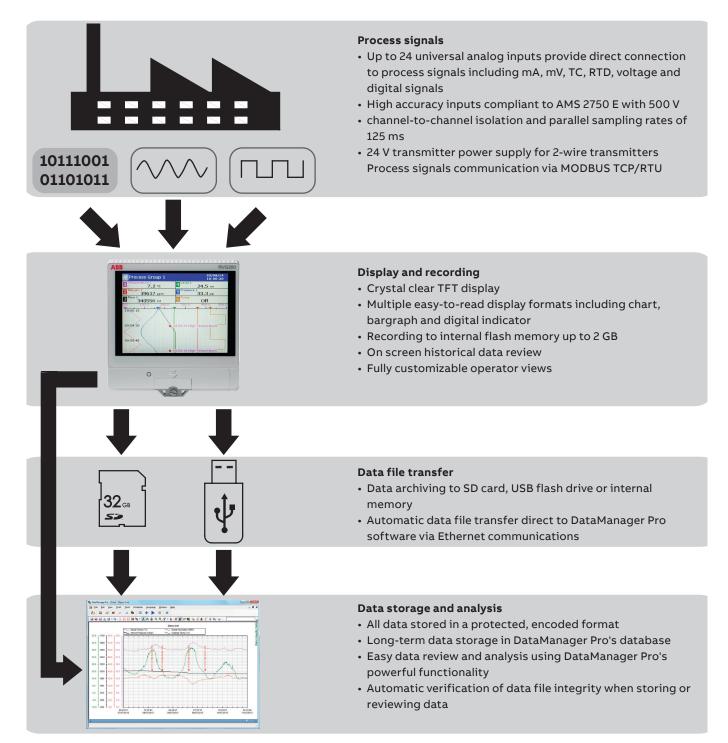

Display examples

To display process information clearly, the RVG200 features 6 configurable process groups. This enables signals from one process to be grouped by type or enables the RVG200 to monitor up to 6 separate processes. Each process group has its own set of displays including a chart, bargraph and digital indicator. Additionally, an overview display simultaneously shows all process signals being recorded

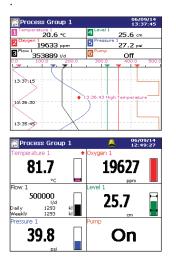

E FIOCO	<i>33</i> (noup z			₽	16:10:1	7
1 Temp 2	23	3.6 ℃		4 Temp 5	75	5.2 ℃	
2 Temp 3	56	i.8 ∘⊂		5 Temp 6	13	3.0 ℃	
3 Temp 4	87	.4 ∘⊂		6 Temp 7	27	7.1 ℃	
			_				
							_
Overv	iew	Display		4	6	06/09/1 16:10:1	
Temp 1	iew	Oxvaen 1		Flow 1		16:10:1 Level 1	
	iew ∘⊂	Oxvoen 1 1962		Flow 1 41444		16:10:1 Level 1 25.6	
Femp 1 81.1	∘⊂	Oxvaen 1 1962 Pum p	5	Flow 1 41444 Temp 2	4	16:10:1 Level 1 25.6 Temp 3	11
Femp 1 81.1 Pressure 1 38.8	∘⊂ psi	Oxvaen 1 1962 Pump On	5	Flow 1 41444 Temp 2 23.6	4	16:10:1 Level 1 25.6 Temp 3 56.8	11
Femp 1 81.1 Pressure 1 38.8	°C psi	Oxvaen 1 1962 Pum p	5 ppm	Flow 1 41444 Temp 2	4 d	16:10:1 Level 1 25.6 Temp 3	cm
Temp 1 81.1 Pressure 1 38.8 Temp 4 87.4	∘⊂ psi	Oxvoen 1 1962 Pump On Temp 5 75.2	5	Flow 1 41444 Temp 2 23.6 Temp 6 13.0	4 1/d	16:10:1 25.6 Temp 3 56.8 Temp 7 27.1	cm
Temp 1 81.1 Pressure 1 38.8	∘⊂ psi ∘⊂	Oxvoen 1 1962 Pump On Temp 5	5 ppm •c	Flow 1 41444 Temp 2 23.6 Temp 6	4 	16:10:1 Level 1 25.6 Temp 3 56.8 Temp 7	cm •C
Temp 1 81.1 ● Pressure 1 38.8 Temp 4 87.4 Temp 8 64.5	° ° ≊ 8	Oxvoen 1 1962 Pump On Temp 5 75.2 Temp 9 48.6	5 ppm	Flow 1 41444 23.6 Temp 6 13.0 Temp 10 22.9	4 d	16:10:1 Level 1 25.6 Temp 3 56.8 Temp 7 27.1 Temp 11 71.5	.1
Temp 1 81.1 Pressure 1 38.8 Temp 4 87.4 Temp 8	°⊂ psi °⊂ °⊂	Oxvoen 1 1962 Pump On Temp 5 75.2 Temp 9	5 ppm ~c	Flow 1 41444 Temp 2 23.6 Temp 6 13.0 Temp 10	4 ./d 	16:10:1 Level 1 25.6 Temp 3 56.8 Temp 7 27.1 Temp 11	
Temp 1 81.1 Pressure 1 38.8 Temp 4 87.4 Temp 8 64.5 Temp 12	Å å ä Å Å	Oxvoen 1 1962 Pump On Temp 5 75.2 Temp 9 48.6 Temp 13	5 ppm •c	Flow 1 41444 Temp 2 23.6 Temp 6 13.0 Temp 10 22.9 Temp 14	4 	16:10:1 Level 1 25.6 Temp 3 56.8 Temp 7 27.1 Temp 11 71.5 Temp 15	cm •C
Pressure 1 38.8 Temp 4 87.4 Temp 8 64.5 Temp 12 68.2	Å å ä Å Å	Oxvoen 1 1962 Pump On Temp 5 75.2 Temp 9 48.6 Temp 13 12.4	5 ppm ~c	Flow 1 41444 Temp 2 23.6 Temp 6 13.0 Temp 10 22.9 Temp 14 65.2	4 ./d 	16:10:1 Level 1 25.6 Temp 3 56.8 Temp 7 27.1 Temp 11 71.5 Temp 15 64.2	

06/09/14

Figure 1 Chart, indicator, bargraph, and overview displays

User-customizable views

Optional user-customizable views enable the creation of basic plant mimics and custom operator views that indicate current process values and status formatted in exactly the way you want to see it. Custom views are created using a PC tool in which bmp images, text, numeric values and function buttons can be laid out and configured. A total of seven custom views can be loaded in to a single recorder, one per group with the seventh as an overview.

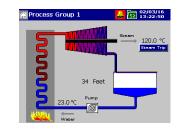


Figure 3 Custom view example


Easy operation

The RVG200's responsive touchscreen makes operation quick and simple. The intuitively structured operation and configuration menus can be navigated quickly via an iconbased system or the process groups and displays controlled via on-screen swipe gestures.



Figure 2 Navigation using on-screen swipe gestures

Ethernet integration

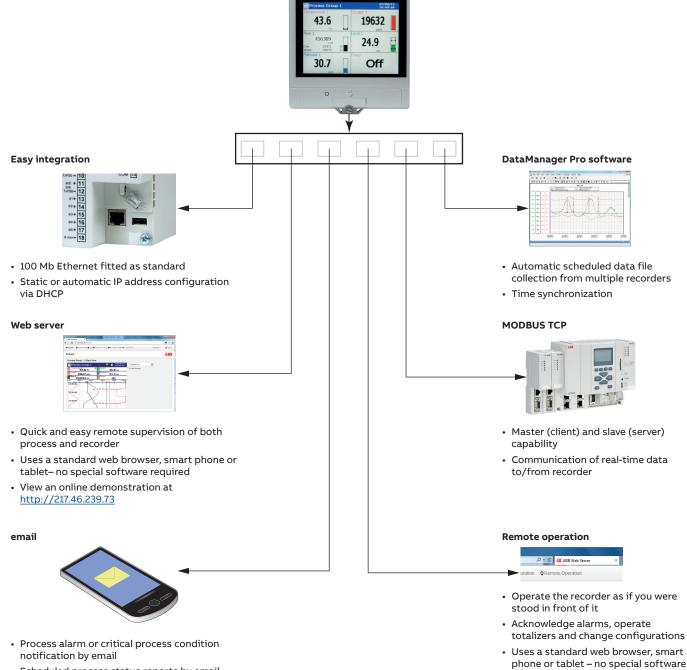

required

• Scheduled process status reports by email

6

7

Historical logs

Three historical logs are kept providing detailed alarm, totalizer and audit history.

Alarm event log

• a complete history of all alarm occurrences including state changes, acknowledgements and operator messages.

Totalizer log

 a convenient summary of totalizer readings including daily, weekly and monthly values.

Audit log

 time, date and ID stamped system data including notification of configuration changes, calibration adjustments and operator actions. The audit log provides detailed evidence of the recorder's integrity and the validity of recorded data.

Math and logic

Math and logic capabilities are available as an option, providing powerful problem solving capability. Bracket and nesting capability enable complex equations to be created, the results of which can be displayed on screen, trended and logged to the memory card. Functionality includes:

- Standard mathematical functions (for example, addition, subtraction, multiplication and division) enable signals to be compared and the comparison values recorded or averages of groups of signals to be calculated.
- Switch and high/low selection functions provide sensor redundancy capability with failure-driven automatic switching between sensors.
- Rolling and real-time average functions can be applied to noisy or erratic process signals proving clearer representation of process trends.

Batch recording

The batch recording option enables simple recording and reviewing of batch processes. When a batch is started it is tagged with a unique batch number, operator identification and 3 user-definable description fields. All information can be entered using the on-screen keyboard, a USB keyboard or a barcode scanner. RVG200 can accommodate multiple batches within single- or multiple-process groups simultaneously. Using DataManager Pro, batches can be recalled for review simply and quickly using the unique batch number or descriptive information entered at the time of its recording. Additional functionality provides the ability to search and sort batch records for an entire production facility in many ways; including by product type, operator and time and date of processing.

A Pr		 15 35
Start Batch		
Batch Number	SBC-765822	00
Product Type	27JH89	60
Jig Number	JIG-3	60
Cycle Time	STANDARD	60
	×	<

Figure 5 Batch recording configuration dialog

GPS data logging

Using RS485 serial communication(NMEA), RVG200 can log process data along with GPS coordinates. This feature is ideal for bilge water discharge monitoring systems and helps ship operators to comply with stringent international regulations governing pollution in marine applications set by MARPOL.

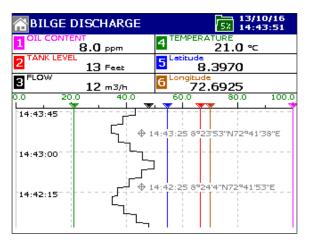


Figure 4 Bilge water discharge monitoring window

DataManager Pro off-line review and analysis software

The RVG200 combined with ABB's DataManager Pro software provides a complete data recording, analysis and long-term storage solution.

All process data and historical log archive files recorded by the RVG200 are compatible with DataManager Pro.

Features include:

- Database management of data files ensures simple, longterm storage and instant retrieval of historical data.
- The graphing capabilities provide powerful interrogation of process data.
- Validity checking of all data files during the storage and retrieval process ensures maximum data integrity.
- Automatic data file collection via Ethernet communications from multiple ScreenMaster recorders provides maintenance-free data file collection.

For further information on the capabilities of DataManager Pro software, refer to data sheet DS/RDM500-EN.

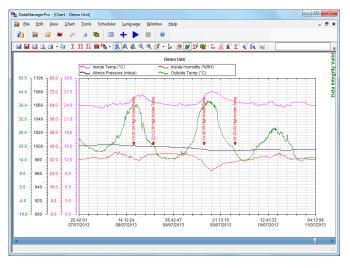


Figure 6 DM Pro screen shot

21 CFR part 11 compliance and GAMP validation package

With its comprehensive audit trail, protected archiving format and extensive physical and configuration security features, the ScreenMaster RVG200 is ideally suited to applications where compliance with 21CFR part 11 (the FDA's regulations regarding electronic record keeping) is required. For further information refer to INF13/147.

A template for validating the RVG200 paperless recorder is available. Following GAMP 5 (a risk-based approach to compliant GxP computerized systems), the template is designed to make the validation process as simple as possible and provides an IQ and OQ that is completed at the customer site, before and after installation. The RVG200's ability to automatically export a report of its configuration significantly speeds up the documentation process. Once completed, the template and report are then packaged together with other documentation relating to the system as a whole, ready to be presented to the governing regulatory body for inspection.



Energy calculations

The RVG200's energy calculations option provides the ability to accurately calculate heat energy in water and steam flows. Predefined equations for closed and return-less systems of water, saturated steam and superheated steam make setup quick and simple. The resultant mass, power and enthalpy values can then be trended and totalized as required. Note. The physical 'density' and 'enthalpy' values of steam and water are calculated in accordance with the latest version of industry standard IAPWS-IF 97.

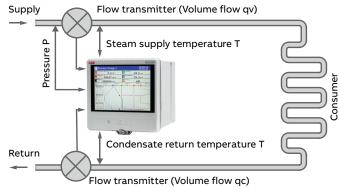


Figure 7 Steam power balance energy equation

Example applications/industries

Temp Fl	ow 1				06	/09/14 1:11			
Flow :	35	16	6	7	l/d		_		
726		z	Â	То	talizer Log				5/09/14 3:45:09
Daily 📈 Weekl 🛪	419885	×	No	•	Tag/Value		Source Tag	Date	Time
PressuWe	ekly		¢	32	Daily		Flow 1	02/09/14	00:00:00
726	57		Σ		35908	kl			
	500000	V	C	33	Daily		Flow 1	03/09/14	00:00:00
×	419885		Σ		35999	kl			
	psi		¢	34	Daily		Flow 1	04/09/14	00:00:00
			Σ		36099	kl			
			¢	35	Daily		Flow 1	05/09/14	00:00:00
			Σ		36014	kl			
			¢	36	Daily		Flow 1	06/09/14	00:00:00
			Σ		36000	kl			
			¢	37	Weekly		Flow 1	06/09/14	00:00:00
			Σ		258054	kl		· · ·	

Overv	iew	r Displa <mark>y</mark>		<u></u>		09/14 32:25		
Temp 1 13.9	۰c	Tem d 2 23.6	۰c	Temo3 56.8 ∘⊂		4 17.4 ∘c		
Tem d 5 75.2	۰c		۰c	Temp 7 27.1 ∘⊂	Tem d 6	8 i4.5 ∘c	:	
Temp 9 48.6	∘⊂	Temp 10 22.9	۰c	Temp 11 71.5	Tem o E	12 8.2		14
Temp 13 12.4	∘⊂	Temp 14 65.2	∘⊂	A Pr C	Nou	Batch	. LLL	J 45
Temp 17 66.5	∘⊂	Temp 18 61.0	۰c	Batch Numb		SBC-76	5822	<u>:</u>
Temp 21 125.3	°C	Tem d 22 69.5	°C	Product Typ	e	273H89		60
				Jig Number		JIG-3		<u> </u>
				Cycle Type		STAND	ARD	60
							X	 Image: A set of the set of the

Water and waste water monitoring

- Dual flow totalizers per channel provide the flexibility to record both a continuous and resettable total for a single flow signal. Both totalizers are clearly displayed to the operator together with the instantaneous flow rate.
- A totalizer log keeps a record of all totalizer occurrences; whenever a totalizer is started, stopped or reset it is logged; together with the totalizer value at the time of the occurrence. The totalizer log is archived with other process data and can be reviewed using DataManager Pro software.
- Flow totalizers can be configured easily to reset automatically at specific intervals – for example, daily, weekly or monthly. When reset, the totalizer value is recorded in the totalizer log to provide a convenient history of flow totalizer values.
- When monitoring flow totals that must conform to strict limits, (for example, waste water discharge monitoring), the recorder's alarms can be configured to warn that a limit is approaching or has been reached.
- All process data can be accessed remotely using Ethernet communications. Additionally, the recorder's internal webserver, detailing the process status, can be viewed using a PC, tablet or smart phone and the flow totalizers can be remotely started, stopped and reset via the webserver.

Heat treatment recording

- High specification inputs provide the accuracy and stability needed to meet the requirements of AMS 2750 G.
- Batch recording enables data such as batch number, product type and other identification to be tagged to process data. Specific batch records can be recalled rapidly and reviewed using DataManager Pro software.
- A barcode scanner can be connected to the front or rear USB port to prevent typographical errors that can occur when batch data is entered manually.
- Process signals can be recorded against a logarithmic scale enabling signals such as vacuum measurements to be represented accurately.
- Chart, digital indicator and bargraph display options enable operators to view process signals in their preferred format. Up to 24 signals can be displayed on a single screen enabling easy comparison of multiple measurements.
- Simple calibration procedure with traceable history detailed in the audit log.

... Example applications/industries

₩Oven	[12/09/14 09:26:58		
1 Temperature 1	105.4 ~			
0.0 50.0 100. 		200.0 250.0		
09:26:00	09:26:10 74423/	S Veg Soup		
09:23:00				
				14 34
09:20:00				
		New Batch		
09:17:00	Batch Num	ber BGD-56	8563	
09:14:00	Product	Peas		60
1 1	Container	Tin		60
	Cycle Type	Standar	d	60
			X	 Image: A second s

<u>۲</u> 0۱				-	7	A٧	14 46		
J Sm	ith -	Ente	r Pas	swor	d		×		
<u> </u>						-			
1	2	3	4	5	6	7 8	9 0		
							┟┯╼╾┛╽		
Q	W	E	R	T	🕋 Au	dit Log		a 12 12 11	2/09/14 1:26:59
A	\ s) F	: 0	No	Event	:/Tag	Date	Time
_					🔌 190	Power fail	ure	12/09/14	10:10:18
\sim	Z	X	C	V	الأر 191	Power rec	covery 0x0	12/09/14	11:11:07
					192 🛃	Config I	Entry.	12/09/14	11:11:31
=;]	} [Cł	hang	e Pas	sswoi	A 193	Recording	; Stopped	12/09/14	11:25:38
_		_	_	_	194 🐻	Time/Date	changed	12/09/14	11:25:42
					🛃 195	Config ch	anged S Cook	12/09/14	11:25:44
					196 🛃	Config I	Entry.	12/09/14	11:25:59
					(3) 197	A/I calib.	Analog I/P A1 J Smith	12/09/14	11:26:16
					🛃 198	Config ch	anged J Smith	12/09/14	11:26:20
					县 199	FTP User	Adams Logged On	12/09/14	11:29:55

Food & Beverage process monitoring

- Full IP66 and NEMA 4X front face protection provide suitability for installation in hose-down environments and those subject to high levels of moisture. This enables installation next to the process, providing local operators with the information they need at their fingertips.
- Batch recording enables data such as batch number, product type and other identification to be tagged to process data. Specific batch records can be recalled rapidly and reviewed using DataManager Pro software.
- A barcode scanner can be connected to the front or rear USB port to prevent typographical errors that can occur when batch data is entered manually.
- F0 value calculation accounts for the time a cooking or sterilization process spends at, below and above its specified temperature. F0 value calculation not only ensures accurate processing of a product, it can also help to increase efficiency by reducing overall processing time.
- Chart, digital indicator and bargraph display options enable operators to view process signals in their preferred format. 6 process groups enable multiple processes to be monitored by a single recorder; each process has its own group to minimize confusion.

Pharmaceutical process monitoring

- Extensive security features including protected data files, multi-user password protection and automatic audit trail generation ensures compliance with 21 CFR part 11 requirements.
- Batch recording enables data such as batch number, product type and other identification to be tagged to process data. Specific batch records can be rapidly recalled and reviewed using DataManager Pro software.
- A barcode scanner can be connected to the front or rear USB ports to prevent typographical errors that can occur when batch data is entered manually.
- F0 value calculation accounts for the time a sterilization process spends at, below and above its specified temperature. F0 value calculation not only ensures accurate sterilization, it can also help to increase efficiency by reducing overall processing time.
- Any event relevant to data security is captured by the Audit Log. This includes configuration and calibration changes complete with time, date and where relevant operator identification. The audit log provides comprehensive evidence of the integrity of the recorder creating data files.

Specification

Operation and configuration

Configuration

- Via resistive touch screen or PC configuration
- Multiple configuration files can be stored in internal memory (up to 16 files) or external memory (SD card, USB flash drive)

Display

- Color, TFT, liquid crystal display (LCD) with LED backlight and brightness adjustment
- 144 mm (5.7 in.) diagonal display area, 76800 pixel (¼ VGA) display *

Language

English, German, French, Italian, Spanish, Chinese, Portuguese, Dutch, Turkish, Russian

Chart screen intervals

Selectable from 18 seconds to 7 days

Chart divisions

Programmable for up to 10 major and 10 minor divisions Chart annotation

Alarm, batch, electronic signatures and operator messages may be annotated on the chart

Real time clock

- Accuracy:
- ±5 ppm (±0.43 seconds per day)
- Back-up battery:
- Battery low warning
- · Provides 3 years support for unpowered condition
- 10 year shelf-life

Security

Physical

- Lockable media door
- Front and rear tamper-evident seals

Configuration security

- Password protection:
- Access to configuration is enabled only after the user has entered a password
- Internal switch protection:
- Access to configuration is enabled only after a hardware switch has been set. This switch is situated behind a tamper-evident seal

Logging security

Configuration:

- Can be configured for password protection or free access to logging level
- Basic type security
- 4 individual users with unique user name and passwords Advanced type security
 - Number of users:
 - Up to 40
 - User names*:
 - Up to 20 characters

Access privileges:

- Logging access Yes/No
- Configuration access –
- none/load file only/limited/full

Passwords:

- Up to 20 characters
- A minimum required password length of 4 to 20 characters can be configured and a password expiry time can be applied to eliminate password ageing
 Password failure limit:
- Configurable for 1 to 10 consecutive occasions or 'infinite'
- A user is deactivated if a wrong password is entered repeatedly

Deactivation of inactive users:

- Can be disabled or configured for 7, 14, 30, 60, 90, 180 or 360 days of inactivity
- Users are deactivated (by removal of access privileges) after a period of inactivity

... Specification

Operator views

		available		
Contents	Chart	Bargraph	Digital indicator	Custom
Instantaneous values/ states	\checkmark	\checkmark	✓	✓
Units of measure	1	1	1	1
Channel tags	1	✓	1	1
Alarm status	1	✓	✓	~
Alarm trip markers	—	\checkmark	✓	—
Max./Min. markers	_	✓	✓	—
Analog bargraphs	—	✓	✓	—
Totalizer values & units of measure	—	_	\checkmark	\checkmark
Totalizer tags	—	—	1	1
Maximum, minimum and average batch values	_	_	\checkmark	\checkmark
Graphical view of historical data	~	_	_	

* If Totalizer option is fitted and selected

Standard functionality

Operator messages

- Number:
- 24

Trigger

Via front panel or digital signals

Recording in alarm/event log

Can be enabled or disabled on configuration

Chart signatures

Recorded in the alarm/event log,

complete with operator identification

Process alarms

Number

• 96 (4 per recording channel)

Types

High/Low:

- Process
- Latch
- Annunciator

Rate:

Fast/slow

Tag

20-character tag for each alarm

Hysteresis

Programmable value and time hysteresis

(1 to 9999 seconds)

Alarm enable

Allows alarm to be enabled/disabled via a digital input

Alarm log enable

Recording of alarm state changes in the alarm/event log can be enabled/disabled for each alarm

Acknowledgement

Via front panel or digital signals

- Real-time alarms
 - Number:
 - 4

Programmable

Day of the week, 1st of month, start and duration times Custom linearization

Number:

• 2

. .

Number of breakpoints

20 per linearizer

Recording to internal memory

Internal flash memory

- 256 MB flash memory upgradeable to 2 GB
- Oldest data is automatically overwritten by new data when memory is full
- Data integrity checks

Checksum for each block of data samples

- Independent process groups
 - 6 (maximum of 24 channels per group)
- Number of recording channels

24 (each channel can be assigned to 1 group only) * Sources

Any analog or digital signal (for example, process input,

communications, math block and totalizer)

Filters

- Programmable for each channel to allow recording of:
- Instantaneous values
- Average
- Maximum, minimum
- Maximum and minimum value over sample time
- Primary/Secondary sample rates
 - Programmable from 0.125 seconds to 60 minutes for each process group

Primary/Secondary sample rate selection

Via any digital signal or from password protected menu

Recording start/stop control

Via any digital signal

Recording duration to 256 MB internal flash memory

Approximate duration calculated for continuous recording of 6 channels of analog data (for example, for 12 channels divide by 2, for 24 channels divide by 4).

Sample rate	Duration
0.125 seconds	10 days
1 second	80 days
10 seconds	2.2 years
60 seconds	13 years
10 minutes	130 years
60 minutes	960 years

Recording duration to 2 GB internal flash memory

Approximate duration calculated for continuous recording of 24 channels of analog data (for example, for 12 channels multiply by 2, for 6 channels multiply by 4).

Sample rate	Duration
0.125 seconds	20 days
1 second	160 days
10 seconds	4.4 years
60 seconds	26 years
10 minutes	260 years
60 minutes	1920 years

Historical logs

Types

Alarm/event, totalizer and audit logs

- Number of records in each historical log
 - Up to 500 in internal memory
 - Oldest data is automatically overwritten by new data when log is full

	Alarm/	event log	Tota	lizer log	Audit log		
Log entry events	g entry events • Alarm state changes • Operator messages		User defined lo Totalizer stop/s Power up/dowr	start, reset, wrap	Configuration/calibration changes System events Errors, operator actions		
Information recorded in log/on screen	In log	On screen	In log	On screen	In log	On screen	
Date & time of event	1	✓	✓	<i>✓</i>	✓	✓	
Type of event	1	✓	✓	<i>√</i>	✓	✓	
Source tag	1	_	✓	—	—	—	
Alarm trip value & units of measure	1	_	—	—	_	—	
Alarm state	1	✓	—	—	_	_	
Alarm acknowledgement state	1	✓	—	—	_	_	
Operator ID	1	_	_	_	✓	1	
Description	_	_	—	—	✓	✓	
Batch total and units of measurement*	_	_	✓	✓	_	_	
Maximum, minimum and average values plus units *	_	_	1	1	_	_	
Secure total	_	_	1	_	_	_	

* If Totalizer option fitted and selected

... Specification

Archiving to removable media

Data that can be saved to removable media

• Recorded data per channel (1 to 24)

- Alarm event log data
- Totalizer log data
- Audit log data
- Configuration

File structure

Binary encoded

File protection

Protected binary format with data integrity checks

New file generation interval

Automatic

Archive sample rates

Data is archived at the same sample rate at which it is stored internally

Filename

20-character tag, prefixed with date/time

Data verification

Carried out automatically on all writes to removable-media files

SD card size

Cards up to 32 GB capacity may be used

USB flash drive size

Drives up to 32 GB capacity may be used

Archive media compatibility

ABB recorders comply with approved industry standards for SD cards and USB flash drives. ABB fully tests the brands of SD cards and USB flash drives that it supplies. Other brands may not be fully compatible with this device and therefore may not function correctly.

Recording duration

Approximate duration calculated for continuous recording of 6 channels of analog data (for example, for 12 channels divide by 2, for 3 channels multiply by 2).

n 1 GB SD cord
1 GB SD card
I GB SD Calu
16 months
13 years
51 years
75 years
255 years
620 years

Analog input modules

General Number of process inputs 6 per module, maximum of 24 inputs Input types mA, mV, voltage, resistance, thermocouple, RTD, digital volt-free, digital 24 V Thermocouple types B, C, D, E, J, K, L, N, R, S, T **Resistance thermometer** PT100, PT1000, Ni120, Ni1000 Other linearizations \sqrt{x} , x3/2, x5/2, custom linearization **Digital filter** Programmable 0 to 60 seconds **Display range** -999999 to 9999999 Common mode noise rejection >120 dB at 50/60 Hz with 300 Ω imbalance resistance Normal (series) mode noise rejection >60 dB at 50/60 Hz CJC rejection ratio ±0.05 °C / °C • CJC error 0.5 °C maximum with recorder @ 25 °C Sensor break protection Programmable as upscale or downscale Temperature stability 0.02 %/°C or 2 IV/°C (non-thermocouple ranges only) AMS 2750 G Subject to suitable field calibration, meets the

requirements of 'Control, Monitoring and Recording Instruments' and 'Field Test Instruments'

Analog to digital converter resolution

24 bit

Long term drift

<0.1 % of reading or 10 IV annually

Input impedance

- >10 MΩ (mV inputs)
- >900 kΩ (voltage inputs)
- 10 Ω (mA inputs)

Inputs

Linear inputs	Standard analog input	Accuracy (% of reading)
Millivolts	–150 to 150 mV	0.1 % or ±20 🛙
Milliamps	–50 to 50 mA	0.1 % or ±10 🛛
Volts	–10 to 24 V	0.1 % or ±10 mV
Resistance Ω (low)	0 to 550 Ω	0.1 % or ±0.5 Ω
Resistance Ω (high)	0 to 10000 Ω	0.1 % or ±5 Ω
Sample interval		125 ms per sample ocessed in parallel)
Channel-to-channel input isolation	Galvanically is	solated to 500 V DC
Isolation from rest of recorder	Galvanically is	solated to 500 V DC

The figures in the following table include linearizer and electrical errors

	Maximu	m range	Measurement accuracy							
Thermocouple	°C	°F	(% of reading)							
В	250 to 1800	482 to 3272	0.1 % or ±1 °C (1.8 °F)							
С	0 to 2300	32 to 4172	0.1 % or ±0.5 °C (0.9 °F)							
D	0 to 2310	32 to 4190	0.1 % or ±1.5 °C (2.7 °F)							
E	-100 to 900	–148 to 1652	0.1 % or ±0.3 °C (0.54 °F)							
J	-100 to 900	–148 to 1652	0.1 % or ±0.3 °C (0.54 °F)							
К	-100 to 1300	–148 to 2372	0.1 % or ±0.3 °C (0.54 °F)							
L	–100 to 900	–148 to 1652	0.1 % or ±0.3 °C (0.54 °F)							
Ν	-200 to 1300	-328 to 2372	0.1 % or ±0.3 °C (0.54 °F)							
R	–50 to 1700	–58 to 3092	0.1 % or ±0.3 °C (0.54 °F) (above 300 °C [572 °F])							
S	-50 to 1700	-58 to 3092	0.1 % or ±0.3 °C (0.54 °F) (above 200 °C [392 °F])							
т	–200 to 300	–328 to 572	0.1 % or ±0.3 °C (0.54 °F)							
RTD										
PT100	-200 to 600	-328 to 1112	0.1 % or ±0.5 °C (0.9 °F)							
PT1000 (IEC 60 751)	–200 to 850	–328 to 1562	0.1 % or ±0.5 °C (0.9 °F)							
Ni120	-80 to 260	–112 to 500	0.1 % or ±0.5 °C (0.9 °F)							
Ni1000	-30 to 130	–22 to 266	0.1 % or ±0.5 °C (0.9 °F)							

Advanced math (optional)

Туре

24 equations provide ability to perform general arithmetic calculations including mass flow (of ideal gases), relative humidity and emissions calculations

Size

40-character equation

Functions

+, –, /, log, Ln, Exp, Xn, $\sqrt{}$, Sin, Cos, Tan, mean, rolling average, standard deviation, high/median/low select, multiplexer, absolute, relative humidity

Tags

8- and 20-character tags for each block

Update rate

1 enabled Math block is updated every 125 ms

Logic equations (optional)

Number 24

Size 11 elements each

Functions

AND, OR, NAND, NOR, XOR, NOT

Tags

20-character tag for each equation Update rate

300 ms

Energy calculations (optional) *

Functions

- Water power
- Steam power
- Steam power balance

Totalizer (optional)

Number

48 (2 per recording channel) 10-digit totals Type

Analog, digital, F0 or timer

Statistical calculations

Average, maximum, minimum (for analog signals)

Batch and secure totals

6-Relay module

Number of relays

Functionality

6 per module

Type and maximum rating

Relay type single-pole changeover Voltage:

250 V AC, 30 V DC

Current:

• 2.5 A AC, 2.5 A DC

Note. The total load for all relays within the recorder must not exceed 17.5 A.

* Includes the advanced math and totalizer options. For further information, refer to Appendix G of the Operating Instructions (OI/RVG200-EN)

... Specification

Hybrid module

6 Analog blocks + 5 digital inputs Analog block Number:

- 6, galvanically isolated
- Configuration options:
- Analog output, digital output or transmitter PSU
- Analog output

Configurable current range:

- 0 to 20 mA
- Maximum load:
- 750 Ω
- Isolation:
- + 500 V DC from any other I/O
- Accuracy:
- 0.25 %

Digital output

- Voltage: • 24 V (nominal)
- Drive:
- 22.5 mA
- Isolation:
- 500 V DC from any other I/O

Transmitter PSU

22.5 mA at 24 V DC (nominal) Isolation:

• 500 V DC from any other I/O

Digital input

- Number:
- 5
- Type:
- Volt-free switching inputs, or Digital 24 V switching inputs

Polarity:

- Negative (closed switch contact or 0 V = active signal)
- Digital input minimum pulse:
- 125 ms
- Isolation:
- 500 V DC from any other I/O *
- 24 V digital input switching threshold:
- Off (0): <5 V
- On (1): >15 V

Ethernet module

Physical medium

- 10/100BaseT
- Protocols
 - TCP/IP, ARP, ICMP, FTP (server), HTTP,
 - MODBUS TCP (master/slave)

FTP server functions

- Directory selection & listing
- File upload/download
- 4, independently configurable users with full or readonly access

Web server functions

- Operator screen monitoring/selection
- Remote monitoring of recording channels, analog/ digital signals, alarms, totalizers and archiving
- Full remote operation of the recorder

RS485 serial communications module

- Number of ports 1 as option
- Connections
- RS485, 2- or 4-wire
- Protocol

MODBUS RTU slave + master

NMEA

Isolation 500 V DC from rest of recorder

USB connections

Number

2 (1 front and 1 rear)

Туре

USB 2

Connectivity

- Mouse
- Keyboard
- Barcode scanner
- (USB wedge interface does not require a driver)
- Flash drive up to 32GB capacity

17

EMC

Emissions & Immunity

- Meets requirements of:
- EN50081-2
- EN50082-2
- EN61326 for an industrial environment

Electrical

Power supply

100 to 240 V AC ±10 % (90 min. to 264 V max.) 50/60 Hz
24 V DC (23.0 to 24.5 V DC)

Power consumption

25 W max.

Power interruption protection No effect for interruptions of up to 20 ms

Safety

General safety EN61010-1 cULus Overvoltage Class III on mains, Class II on inputs and outputs Pollution category 2 Isolation 500 V DC to earth (ground)

Environmental

Operating temperature range 0 to 50 °C (32 to 122 °F) Operating humidity range 5 to 95 % RH (non-condensing) Storage temperature range -10 to 60 °C (14 to 140 °F) Front panel sealing IP66 and NEMA4X Rear panel sealing • IP40 (with rear cover) • IP20 (without rear cover) Vibration Conforms to EN60068-2-6


Altitude


2000m (6562 ft) max. above sea level

Physical

Size Height and width 144 x 144 mm (5.7 x 5.7 in.) Depth behind panel (including terminal cover) 147 mm (5.8 in.) Weight 2.0 kg (4.4 lb) approx. (unpacked) Panel cutout 138 x 138 mm(5.43 x 5.43 in.) Case/Bezel material 10 % glass-filled polycarbonate Touch screen material Polyester (EBA 250)

Electrical connections

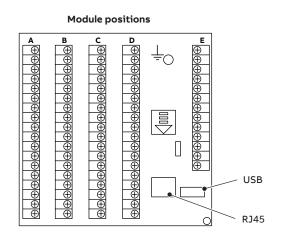


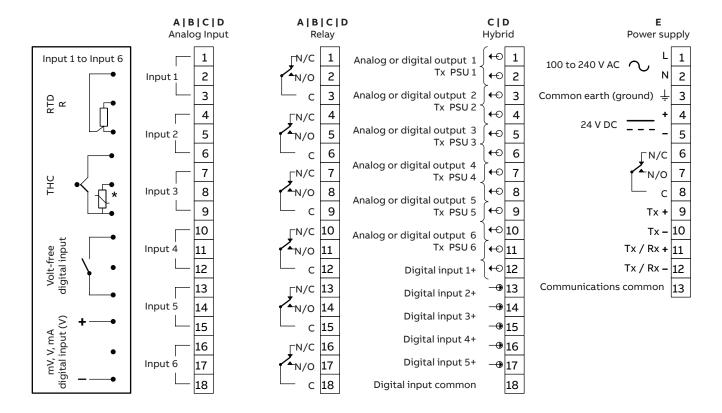


* Each thermocouple input must have either a cold junction assembly (part number CM30/0052) or shorting link (part number RVG200/0118) fitted. Each analog input card with a thermocouple input must have a minimum of 1 cold junction assembly fitted. For applications requiring maximum thermocouple accuracy, it is recommended that each thermocouple input is fitted with a cold junction assembly.



Dimensions in mm (in.)

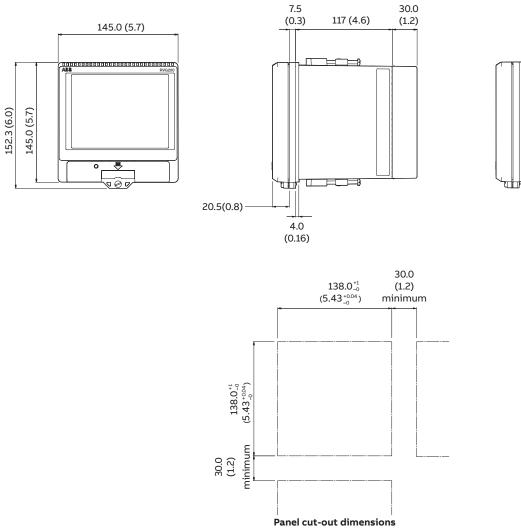

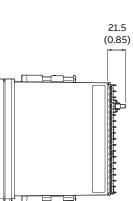

Ordering information

ScreenMaster RVG200 paperless recorder RVG200 paperles	VG200 AN	AN	AN	AN	Α	Ν	Α	Ν	Α	Ν	Α	Α	Ν	OPT
Option module A														
Not fitted	Y0													
6 analog inputs	A6													
6 relay outputs	R6													
Option module B														
Not fitted		Y0												
6 analog inputs		A6												
6 relay outputs		R6												
Option module C														
Not fitted			Y0											
6 analog inputs			A6											
Hybrid – 6 outputs (transmitter power supply, digital or analog) and 5 digital inputs			H6											
6 relay outputs			R6											
Option module D														
Not fitted				Y0										
6 analog inputs				A6										
Hybrid – 6 outputs (transmitter power supply, digital or analog) and 5 digital inputs				H6										
6 relay outputs				R6										
Internal memory size														
256 MB					А									
2 GB					D									
Expansion 1														
None						0								
Communications														
Ethernet							Α							
Ethernet and RS485 Modbus							В							
Ethernet and RS485 NMEA							С							
Approvals														
Standard								1						
cULus								2						
Configuration									_					
Standard (company default)									А					
Custom configuration (customer to complete and supply RVG200 custom configuration she	et (INF13/	146))						В					
Engineered configuration (customer to supply configuration details required)									Е					
Branding														
ABB standard										1				
Unbranded front panel and start-up screen										2				
				Cor						-	·			

ScreenMaster RVG200 paperless recorder	RVG200 AN AN AN AN A N A N A N A A A A A	OP
	See page 20	
Archive media		
Standard grade SD card	A	
ndustrial grade 512 MB SD card	C	
ndustrial grade 2 GB SD card	E	
Standard grade USB flash drive	ן כ	
ndustrial grade 512 MB USB flash drive	L	
ndustrial grade 2 GB USB flash drive	N	
IMI language		
English	5	
German	1	
Spanish	3	
French	4	
talian	2	
Chinese	6	
Portuguese	A	
Dutch	D	
Expansion 2		
None	Y	
Calibration certificate		
Certificate of calibration **		C
Special features		
GAMP validation compatible recorder		K
Printed instruction manual		
English		M
German		M
Spanish		M
French		M
talian		M
Chinese		М
Software options		
Math & logic		N
Fotalizers/timers		N
Batch		N
Energy calculations (includes math & logic and totalizers/timers)		N
Jser-customizable views		N!

* When a calibration certificate is ordered it is performed according to the specified configuration type: CUS/ENG – Inputs and outputs calibrated according to the customer supplied configuration details and ranges. STD – Inputs and outputs calibrated according to the instrument factory standard configuration and ranges.

Example product ordering code:

RVG200A6H6Y0Y0A0A1A1C5Y-C1-N1-N3



Standard accessories

Included with each recorder:

- Panel-mounting clamps
- Media-door lock keys
- DataManager Pro software
- 1 CJ sensor per input card
- 5 CJ shorting links
- PC configuration software

Optional accessories

RDM500L	DataManager Pro single user license
RDM500ML	DataManager Pro multi-user license
ENG/REC	After-sales engineered configuration service
СМ30/0052	Additional CJ sensor
B13328	512 MB industrial grade SD card
B13329	2 GB industrial grade SD card
B13331	512 MB industrial grade USB flash drive
B13332	2 GB industrial grade USB flash drive
RVG200/0700	6-channel analog input upgrade kit
RVG200/0701	Hybrid module upgrade kit
RVG200/0702	Relay module upgrade kit
RVG200/0703	RS485 Modbus upgrade kit
RVG200/0706	2 GB internal memory upgrade kit
RVG200/0715	Batch upgrade
RVG200/0716	Math and logic upgrade
RVG200/0717	Totalizer upgrade
RVG200/0719	RS485 NMEA upgrade kit
RVG200/0722	Energy calculation upgrade
RVG200/0723	User-customizable views upgrade
CD/VALRVG200	Validation package

Acknowledgments

MODBUS is a registered trademark of the Modbus-IDA organization







ABB Measurement & Analytics

For your local ABB contact, visit: **www.abb.com/contacts**

For more product information, visit: www.abb.com/measurement

We reserve the right to make technical changes or modify the contents of this document without prior notice. With regard to purchase orders, the agreed particulars shall prevail. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

© Copyright 2024 ABB. All rights reserved.